

RX IR Series

RX Picosecond Lasers

TEM₀₀, Infrared, Picosecond Lasers

With over 15 years of expertise in developing and refining picosecond laser features, performance, reliability, after delivering thousands of these RX series lasers, RX Series picosecond lasers deliver exceptional performance, precision, and durability, making them ideal for advanced industrial and scientific applications. our RX series excels in precision manufacturing, scientific research, and ultrafast laser processing. While maintaining consistent reliability and accuracy.

Photronics Industries has earned a reputation as a global leader in ultrafast laser technology. Each laser is built to rigorous quality standards, reflecting our commitment to innovation and customer satisfaction. Our proven track record demonstrates our ability to address complex challenges and deliver solutions that empower cutting-edge industries and research.



APPLICATIONS

- Marking & Scribing
- Medical Device Laser Micro processing
- Thin Film Removal and Processing
- PCB & Polymer Cutting & Drilling
- Selective Annealing and Doping
- Solar Cell Manufacturing
- Semiconductor Processing
- Micromachining Transparent Materials

FEATURES

- Up to ~500μJ Pulse Energy at 600kHz
- True TEM₀₀ Output, M² < 1.3
- Exceptional point stability (<25urad)
- Ultra-Short Pulse Widths (10ps @1064nm)
- Burst Mode for Pulse Control
- Robust & Compact Form Factor
- Dynamic **Pulse Energy Control - PEC**
- **Position Synchronized Output - PSO**
- Power Monitoring and Self-Calibration

Specifications – RX Series ^{1,2,3,4}			
	RX-1064-40	RX-1064-100	RX-1064-150
Wavelength Output (nm)	1064		
Average Power @ 1MHz (W)	40	100	150
Max Pulse Energy (μJ) ⁵	300	400	500
Specification PRF (kHz)	300		
Pulse Width (ps)	~10		
Pulse repetition rate (kHz) ⁶	Single Shot to 2000		
Pulse-to-pulse stability (RMS %)	<1		
Long-term power stability (RMS %) ⁷	≤1		
Beam spatial mode & M ² ⁸	TEM ₀₀ - M ² <1.3	TEM ₀₀ - M ² <1.2	
Beam Diameter (mm)	1.5 ± 0.5		2 ± 0.5
Beam Divergence (nominal) (mrad)	<1.5		
Beam Circularity (%)	>90		
Beam Pointing Stability (μrad)	<25		
Beam Bore Sight Accuracy	≤ 1 mm lateral (to specified exit location), ≤ 5 mrad angular (to specified exit direction)		
Polarization ratio	Vertical; >100:1		
	Burst Mode		
MegaHz Burst Mode (kHz)	Single Shot to 2000		
Max Sub-pulses in Burst ¹⁰	20		
	Operational Specifications and Characteristics		
Interface	RS232, Ethernet, Software GUI, External TTL Triggering		
Warm-up time	< 5 minutes from standby, <15 minutes from cold start		
Electrical requirement	100-240 V AC		
Line frequency (Hz)	50-60		
Power consumption (W)	<500	<900	<1300
Dimensions	16 x 8.5 x 4.5 in. [406.4 x 215.9 x 114.3mm]	20 x 8.5 x 4.5 in. [508 x 215.9 x 114.3mm]	20 x 10 x 4.5 in. [508 x 254 x 114.3mm]
Weight	~38lbs [17.2kg]	~47lbs [21.3kg]	~57lbs [25.9kg]
	Environmental Requirements		
Ambient temperature ²	Ambient 15°C to 30°C (59°F to 86°F) Operating Range		
	Relative humidity 0% to 80% max, non-condensing		
Storage conditions	-10°C to 40°C; sea level to 12000 m		
	0% to 80% relative Humidity, non-condensing		
Cooling system	Water-Cooled [20-22°C ± 0.1°C]		

Notes:

[1] After warm-up time, steady state chiller temperature

[2] Steady-state operation (no pulse gating or constant no gating or PRF change).

[3] Single pulse operation [Burst = 1]

[4] Maximum power with PEC = 100.

[5] "HE" model optimized at 100 kHz operation available. Maximum power reduced, please contact us

[6] Option up to 15 MHz

[7] Measured over 8 hours ± 1°C, for operation of the laser outside of the specified temperature range, contact PI.

[8] ALL beam parameters and stability are at specification repetition rate.

[9] Pulse repetition rate x number of burst cannot exceed 15 MHz

Specifications – RX Series ^{1,2,3,4}		
	RX-1064-200	RX-1064-250
Wavelength Output (nm)	1064	
Average Power @1MHz (W)	200	250
Max Pulse Energy (μJ) ⁵	325	400
Specification PRF (kHz)	600	
Pulse Width (ps)	~10	
Pulse repetition rate (kHz) ⁶	Single Shot to 2000	
Pulse-to-pulse stability (RMS %)	<1	
Long-term power stability (RMS %) ⁷	≤1	
Beam spatial mode & M ² ⁸	TEM ₀₀ - M ² <1.3	
Beam Diameter (mm)	2.5 ± 0.5	
Beam Divergence (nominal) (mrad)	<1.5	
Beam Circularity (%)	>90	
Beam Pointing Stability (μrad)	<25	
Beam Bore Sight Accuracy	≤ 1 mm lateral (to specified exit location), ≤ 5 mrad angular (to specified exit direction)	
Polarization ratio	Vertical; >100:1	
	Burst Mode	
MegaHz Burst Mode (kHz)	Single Shot to 2000	
Max Sub-pulses in Burst ⁹	20	
	Operational Specifications and Characteristics	
Interface	RS232, Ethernet, Software GUI, External TTL Triggering	
Warm-up time	< 5 minutes from standby, <15 minutes from cold start	
Electrical requirement	208-240 V AC	
Line frequency (Hz)	50-60	
Power consumption (kW)	<1.8	<2.6
Dimensions	20 x 12 x 4.5in [508 x 304.8 x 114.3mm]	28 x 14 x 4.5 in. [711.2 x 355.6 x 114.3mm]
Weight	~65lbs	~100lbs
	Environmental Requirements	
Ambient temperature ²	Ambient 15°C to 30°C (59°F to 86°F) Operating Range	
	Relative humidity 0% to 80% max, non-condensing	
Storage conditions	-10°C to 40°C; sea level to 12000 m	
	0% to 80% relative Humidity, non-condensing	
Cooling system	Water-Cooled [20-22°C ± 0.1°C]	

Notes:

[1] After warm-up time, steady state chiller temperature

[2] Steady-state operation (no pulse gating or constant no gating or PRF change).

[3] Single pulse operation [Burst = 1]

[4] Maximum power with PEC = 100.

[5] “HE” model optimized at 100 kHz operation available. Maximum power reduced, please contact us

[6] Option up to 15 MHz


[7] Measured over 8 hours ± 1°C, for operation of the laser outside of the specified temperature range, contact PI.

[8] ALL beam parameters and stability are at specification repetition rate.


[9] Pulse repetition rate x number of burst cannot exceed 15 MHz

Power and Pulse Energy vs. PRF Graph


Power Vs. PRF

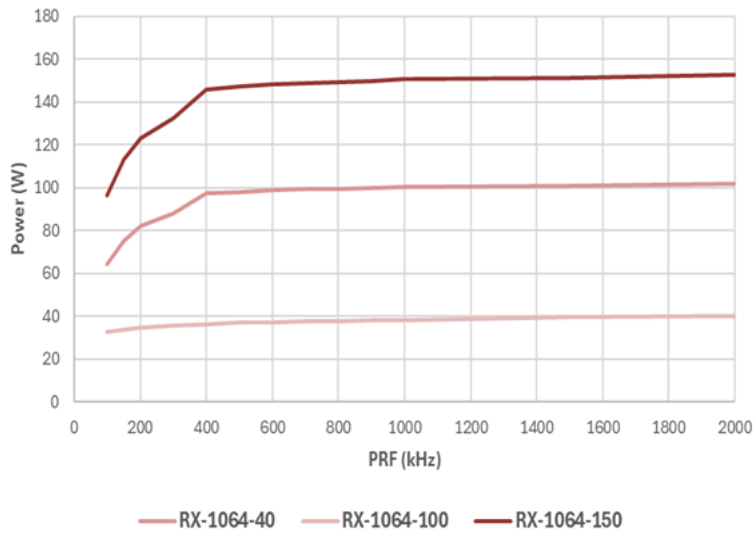


Power Vs. PRF

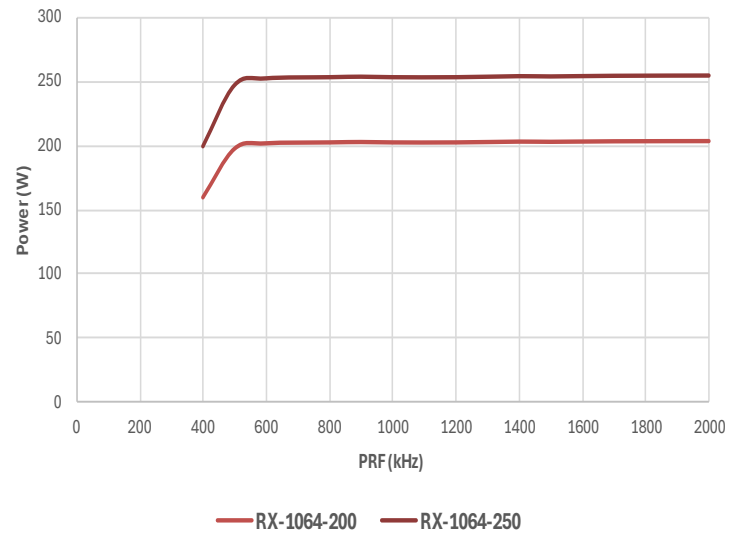

Pulse Energy Vs. PRF

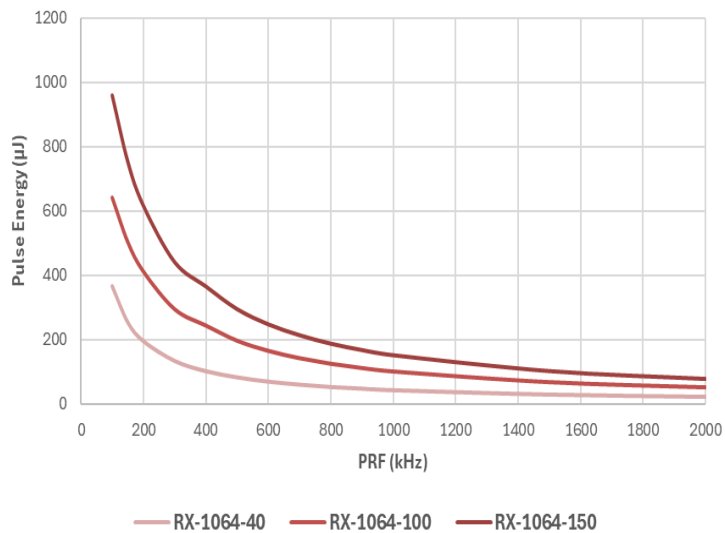

Pulse Energy Vs. PRF

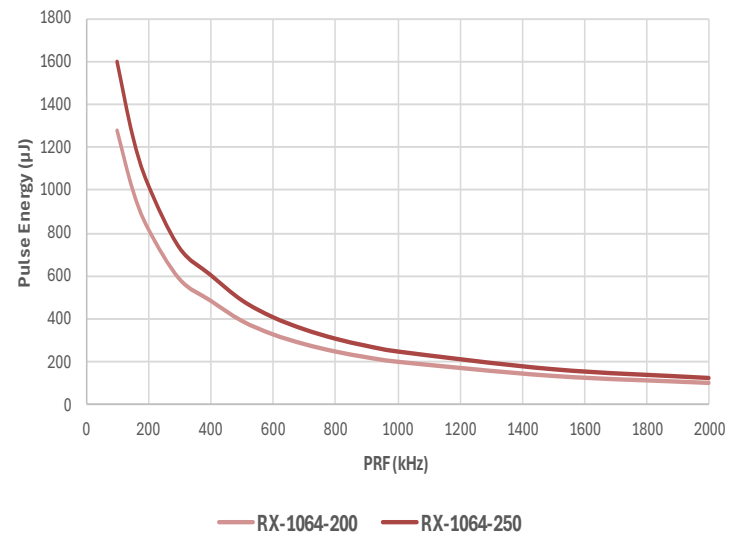

RX Series Ultrafast Lasers Pulse Control

Burst Mode:

Photonics Industries RX Series picosecond laser provides a Burst Mode feature for individually controllable pulses in burst envelopes of up to ten (10) pulses with intra-burst pulse separation of ~31 ns for the RX. The feature is dynamic, allowing for individual control of each pulse amplitude in the burst envelope, such that one can equalize the pulse energy amplitudes ("flat" burst), dynamically modify each individual amplitude for a unique burst envelope suited for the user's need, or even "blank out" pulses in the envelope to effectively lengthen the intra-burst pulse separation.



HIGH BURST PULSE ENERGIES

- Photonics Industries leading single pulse energies translate into exceptionally high burst pulse energies up to >1mJ in the ultrafast regime.



PRF (kHz)	Pulses in the burst (N)	Total burst energy (mJ)	Max PRF (kHz)
200	2	0.47	2000
175	3	0.54	2000
150	4	0.64	2000
130	5	0.73	1928
120	6	0.8	1815
110	7	0.87	1714
100	8	0.95	1624
90	9	1.04	1543
80	10	1.16	1470

Burst mode total pulse energy data is taken from an RX2-1064-100 picosecond laser (IR, 100W).



CONTROLLABLE INTRA-BURST PULSES

- Equalize pulse energy amplitudes for a "flat" burst envelope.
- Dynamically control each individual pulse energy amplitude in the burst envelope.

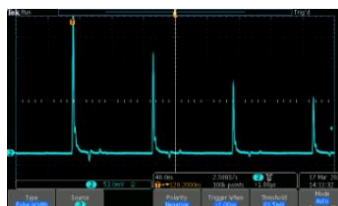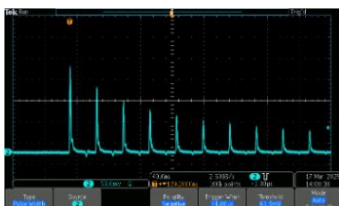

PEC:

PEC (Pulse Energy Control) is a feature that allows users to attenuate the laser's output power or energy via software settings or external analog signals. It is not designed to maintain constant pulse energy across varying repetition rates, but rather to set a fixed attenuation level for stable operation at a given PRF.

PSO:


PSO allows the laser to fire pulses in sync with a moving stage, galvo scanner, or conveyor system. This ensures that pulses are only delivered when the laser is exactly over the target location, preventing overlap or missed spots.

POD:

POD allows the laser to emit controlled sequences of pulses based on an internal PRF while maintaining the pulse energy associated with that higher PRF. Users can define when and how bursts are triggered, whether continuously or by external command, using settings such as Burst Rate, Burst Count, and Burst Cycles. This enables the laser to effectively output pulses at a lower average PRF while preserving high pulse energy, making it ideal for applications requiring precise energy delivery at specific intervals or positions.




Dimensional Drawings

RX-1064-40

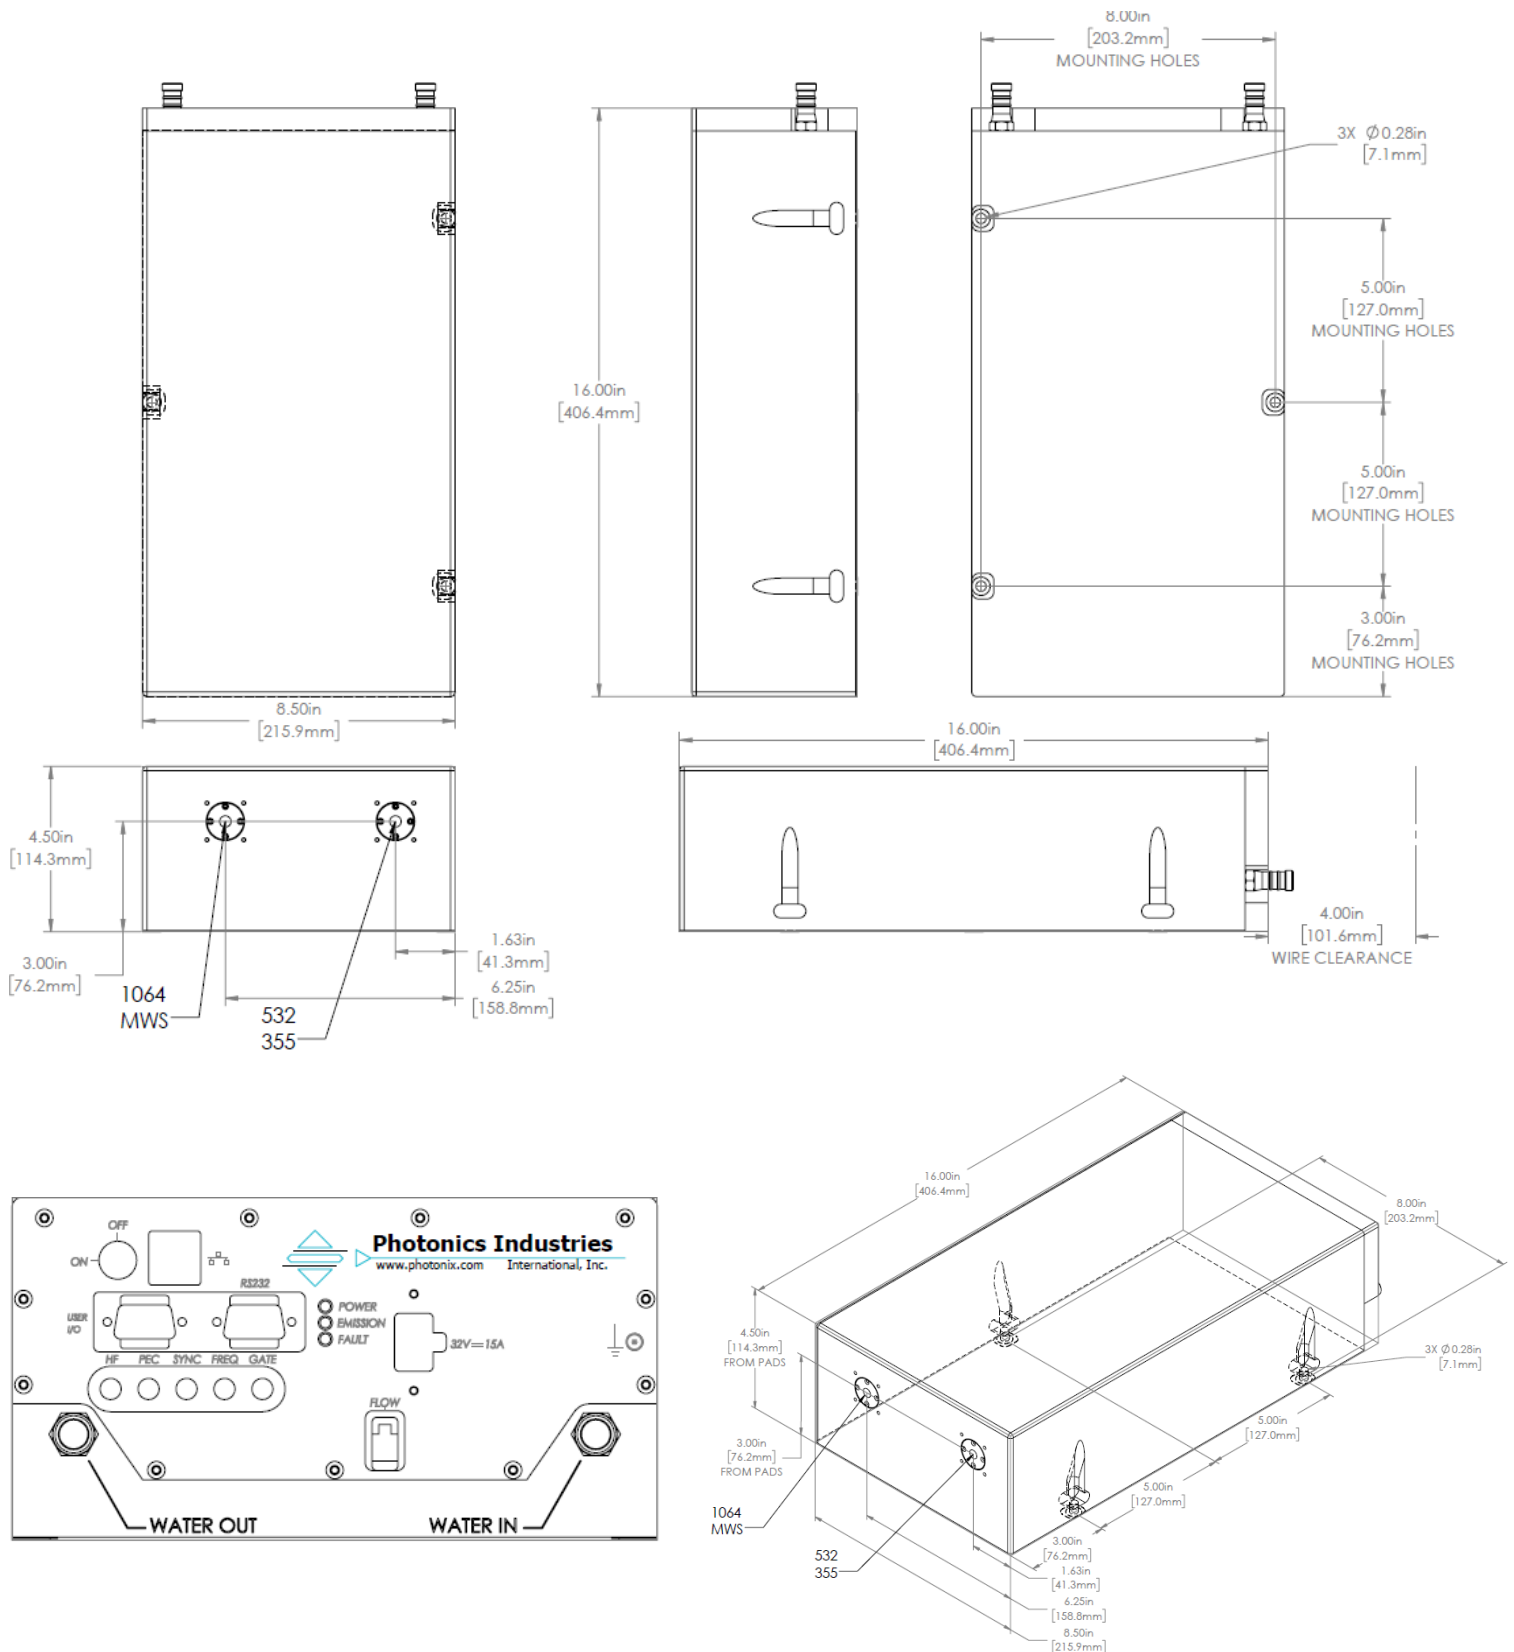


Dimensional Drawings

RX-1064-150

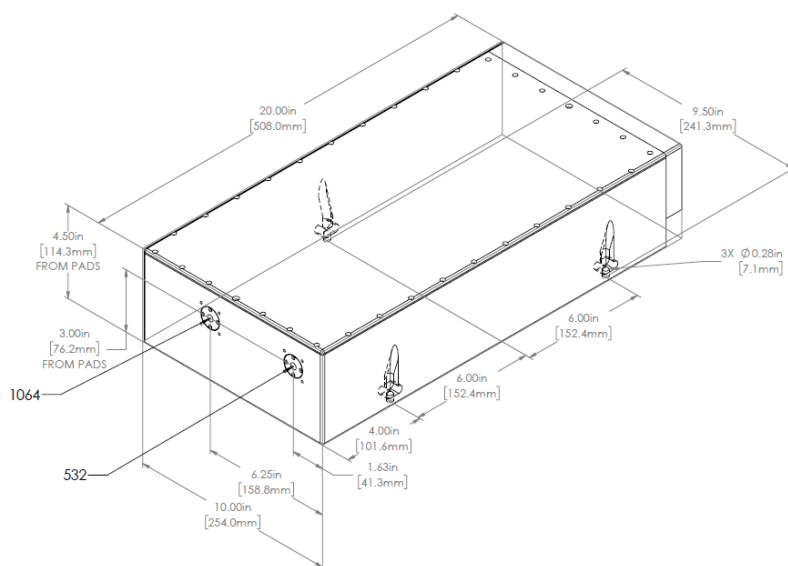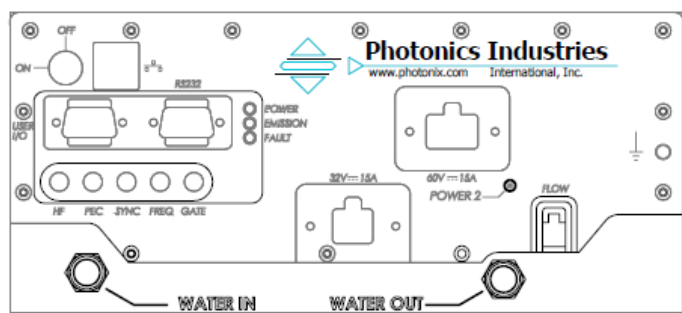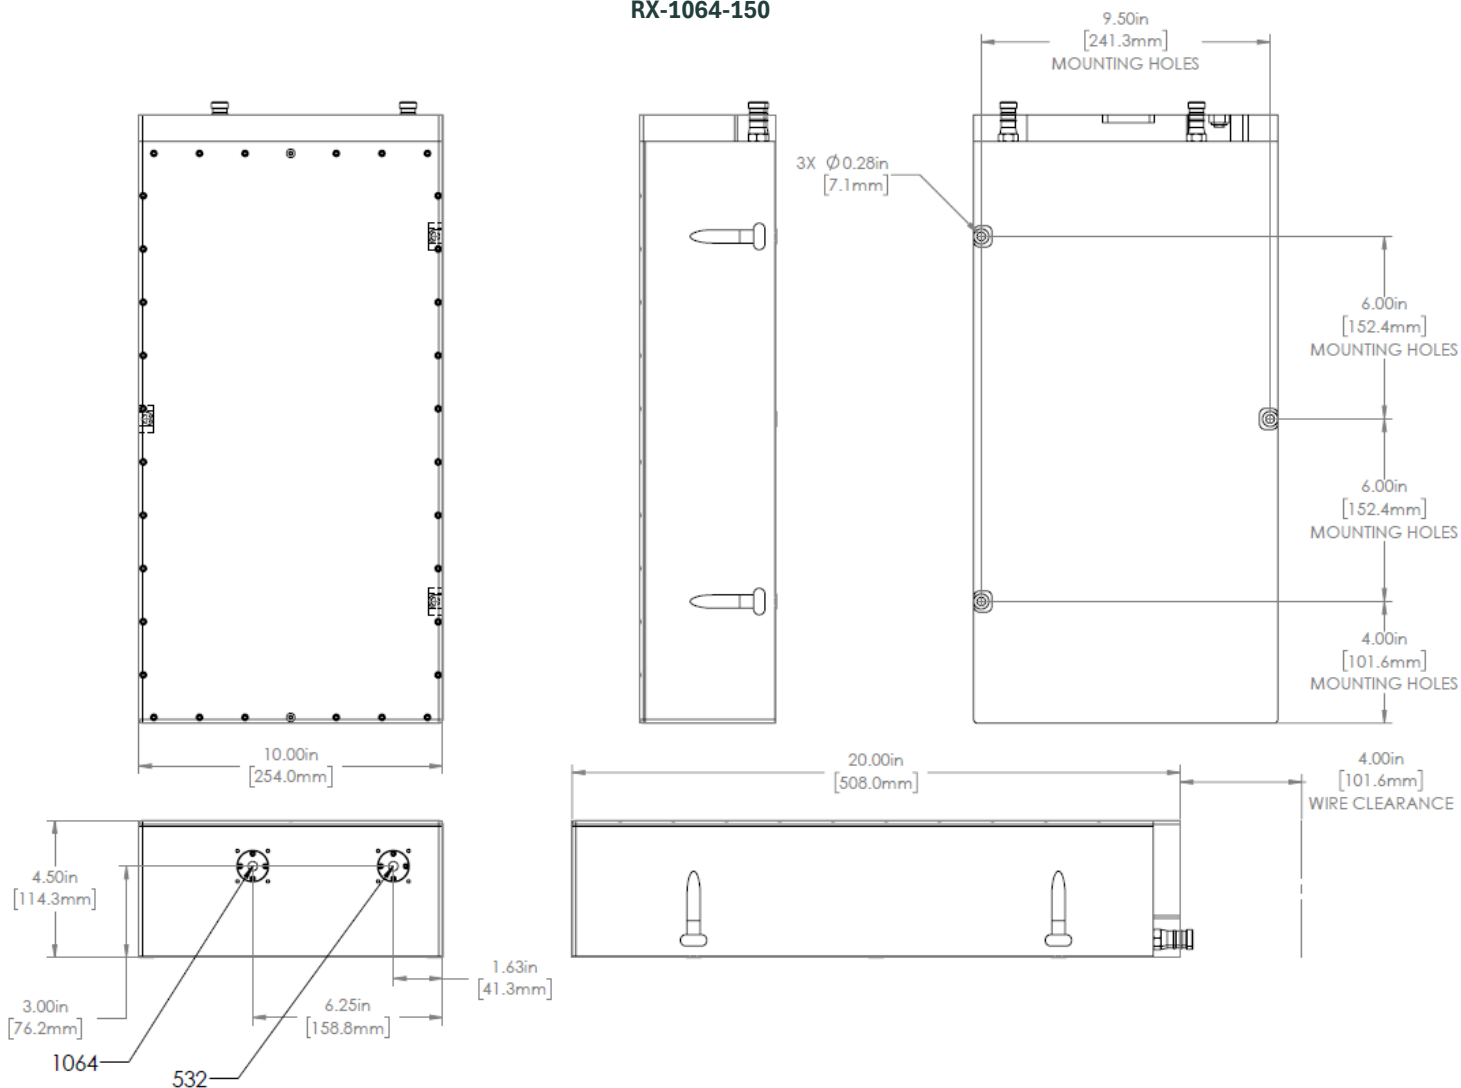

Dimensional Drawings RX-1064-150

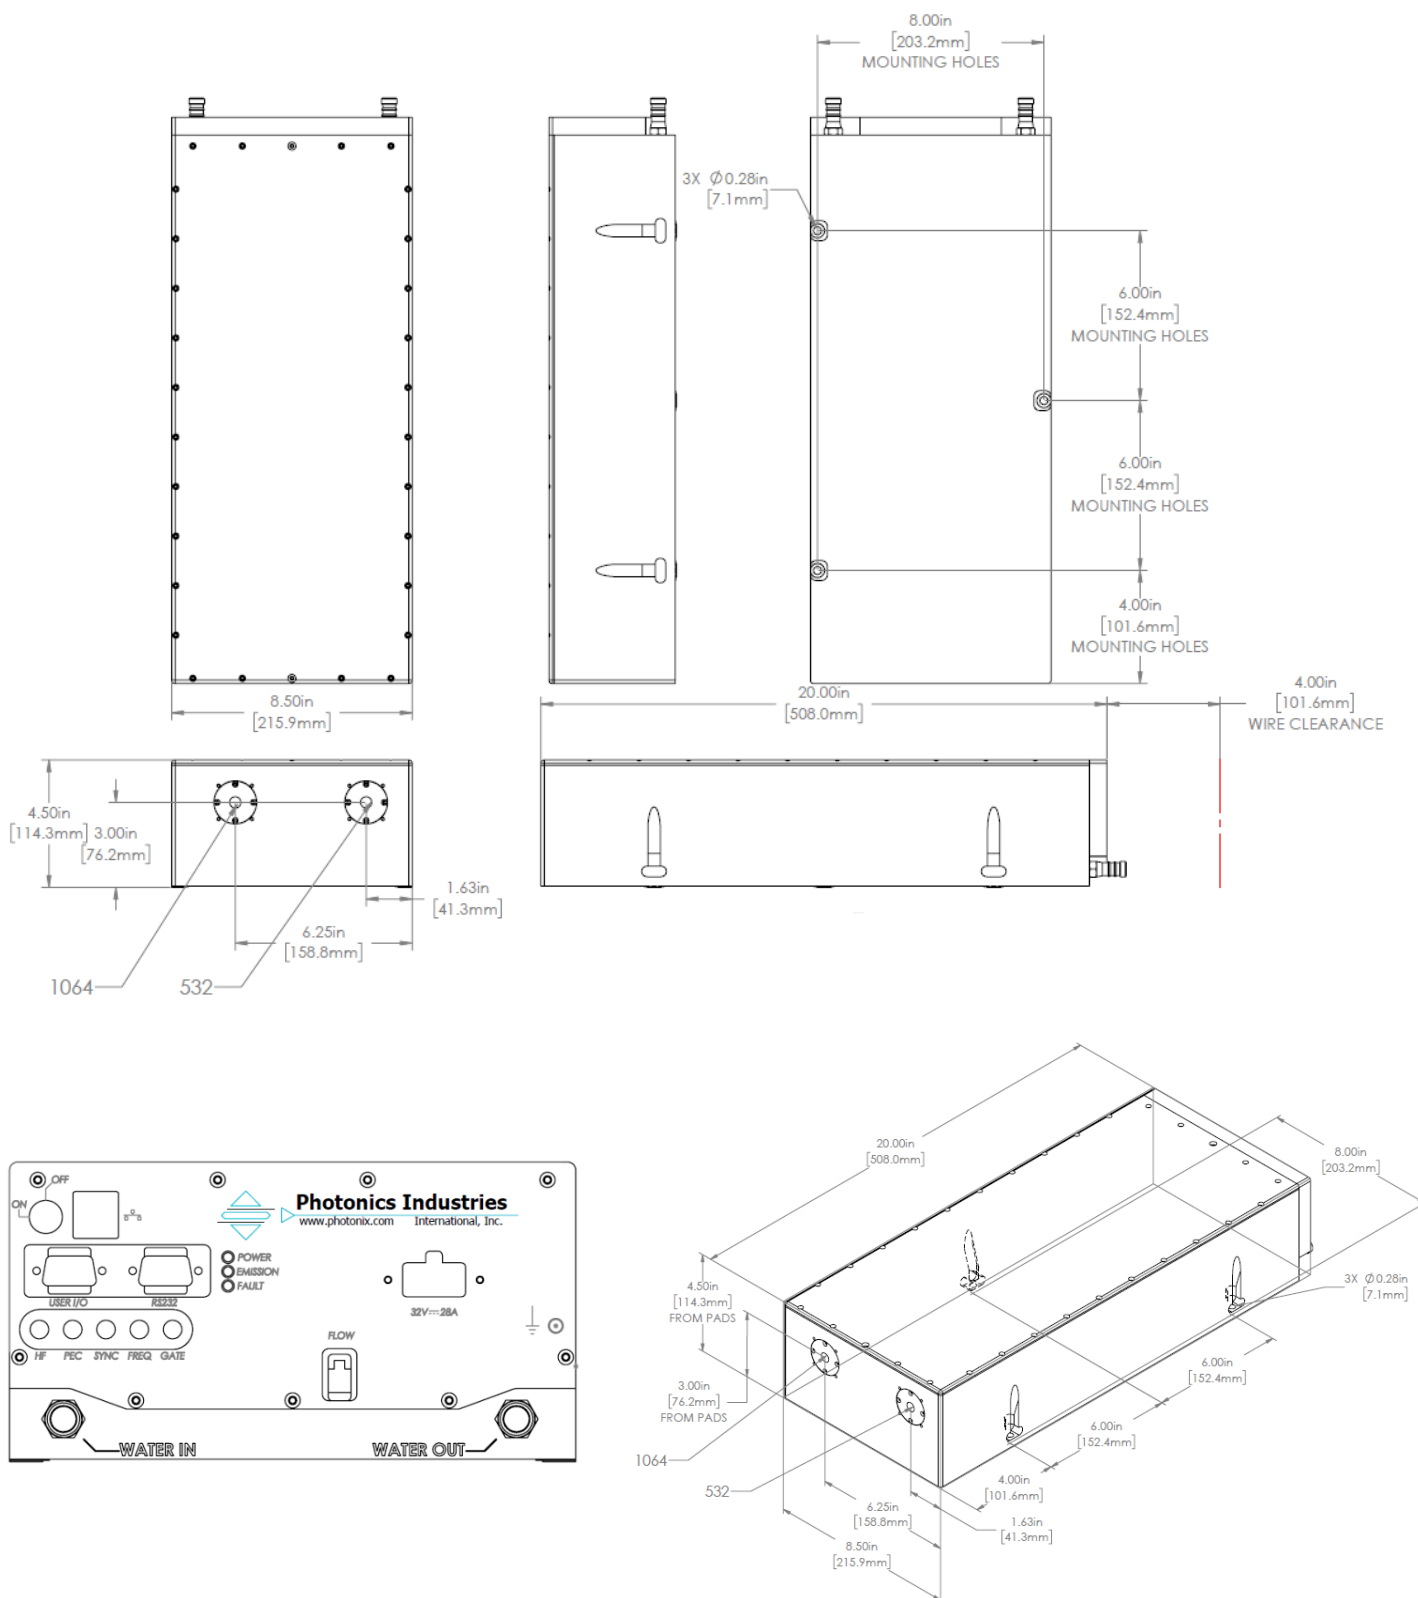

Technical drawing of the 1064 enclosure, showing front, side, and top views with dimensions in inches and millimeters.

Front View:

- Width: 12.00in [304.8mm]
- Height: 20.00in [508.0mm]
- Mounting Holes: 3x Ø0.28in [7.1mm] (3x Ø0.28in [7.1mm])
- Mounting Holes Spacing: 11.50in [292.1mm]
- Mounting Holes Vertical Spacing: 6.00in [152.4mm] (6.00in [152.4mm]), 6.00in [152.4mm], 4.00in [101.6mm]

Side View:

- Height: 4.50in [114.3mm]
- Mounting Holes: 2x Ø0.28in [7.1mm] (2x Ø0.28in [7.1mm])
- Mounting Holes Spacing: 3.00in [76.2mm]
- Mounting Holes Vertical Spacing: 6.00in [152.4mm]


Top View:

- Width: 12.00in [304.8mm]
- Depth: 20.00in [508.0mm]
- Mounting Holes: 2x Ø0.28in [7.1mm] (2x Ø0.28in [7.1mm])
- Mounting Holes Spacing: 3.00in [76.2mm]
- Mounting Holes Vertical Spacing: 6.00in [152.4mm]
- Wire Clearance: 4.00in [101.6mm]

Isometric View:

- Width: 12.00in [304.8mm]
- Depth: 20.00in [508.0mm]
- Height: 4.50in [114.3mm]
- Mounting Holes: 2x Ø0.28in [7.1mm] (2x Ø0.28in [7.1mm])
- Mounting Holes Spacing: 3.00in [76.2mm]
- Mounting Holes Vertical Spacing: 6.00in [152.4mm]
- Wire Clearance: 4.00in [101.6mm]

Dimensional Drawings RX-1064-250

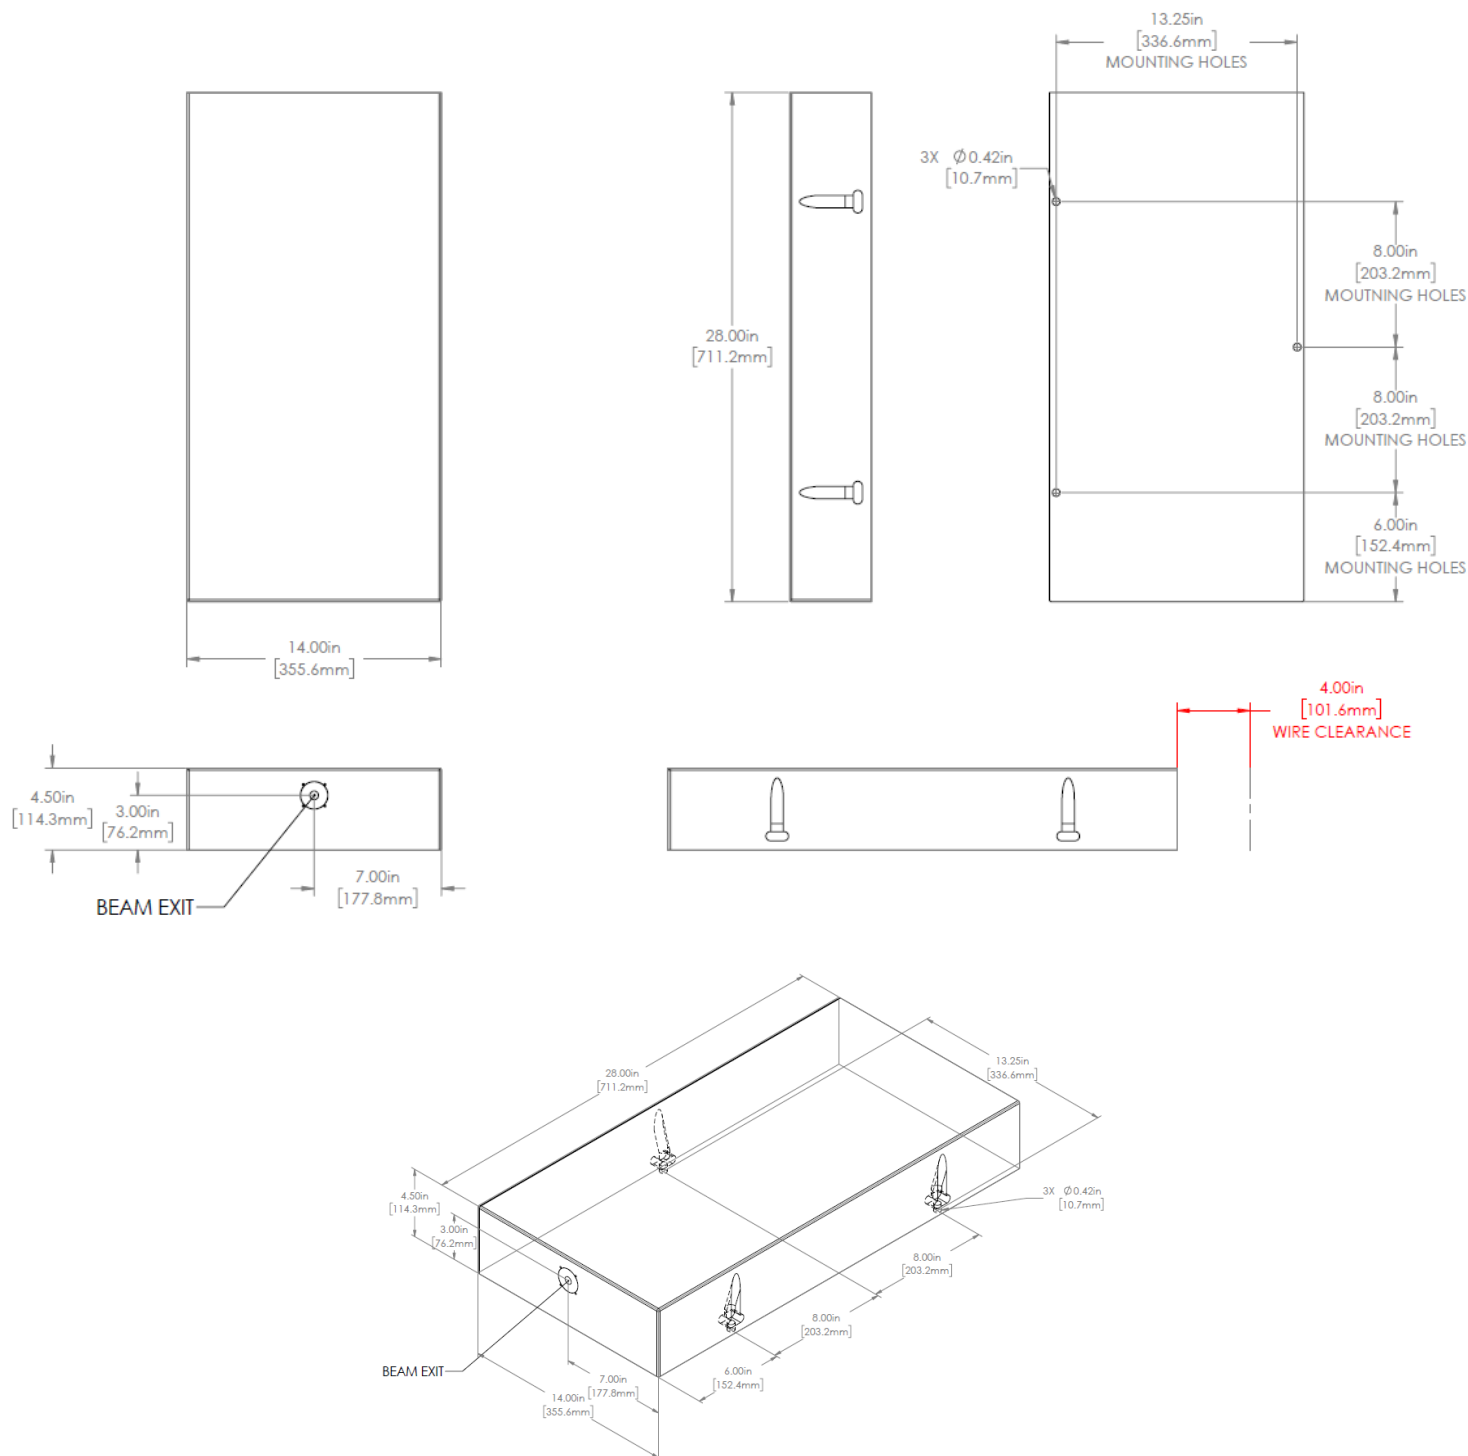

© 2025 Photonics Industries International, Inc.

Headquarters: 1800 Ocean Ave, Ronkonkoma, New York 11779, United States

Photonics Industries International Inc. is the pioneer of intracavity harmonic lasers and is at the forefront of developing, manufacturing, and marketing a wide range of nanosecond, sub-nanosecond, picosecond, and femtosecond lasers for the industrial, scientific, defense and medical industries.

For more information www.photonix.com



Our ongoing policy is to improve the design and specification of our products. The information provided is non-binding.

光と人をつなぐ

Rayture Systems



レイチャーシステムズ株式会社

〒160-0006 東京都新宿区舟町7 ロクサンビル7F

TEL : 03-3351-0717 FAX : 03-3351-6771

URL : <http://www.rayture-sys.co.jp>

E-mail : laser@rayture-sys.co.jp